





BY  **IRONWOOD**

CH15/CH18

CUBBY HOLE UNITS

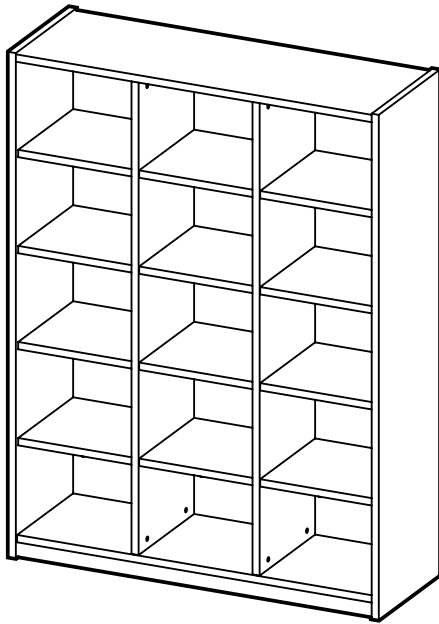

CH15

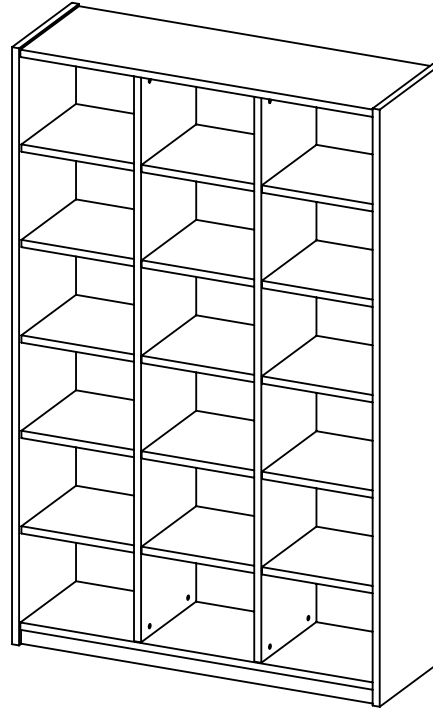

CH18

IMPORTANT!

Assembly may require the assistance of another person.

Before you begin assembly:

READ THE DIRECTIONS all the way through one time. This will speed up the process and help you understand the sequence of steps.

COUNT THE PARTS AND HARDWARE before assembly. This ensures you have received all necessary parts before you begin.

TOOLS: You may need a Phillips head screwdriver, a medium slotted screwdriver or a plastic mallet. To protect your new furniture from damage during assembly, it is recommended to work on a carpeted surface.

In the event any parts are missing from this package, send your name, address, telephone number, and a description of the missing part(s) to: **PARTS, Box 1420, Missoula, MT 59806** or call: **1-800-769-5693** or **FAX 1-800-445-5281**.

CAUTION: On assemblies requiring glue, make sure the unit is assembled correctly before gluing. Once this unit is assembled with glue, the manufacturer will not be responsible for damaged parts. Keep a damp cloth or sponge handy to wipe off excess glue.

To care for this furniture, simply wipe with a cloth dampened with glass cleaner containing ammonia-D.


PARTS DIAGRAM



Back – CH15	01060352	3 ea.
Back – CH18		3 ea.




Left Side – CH15	01060341	.1 ea.
Left Side – CH18		1 ea.

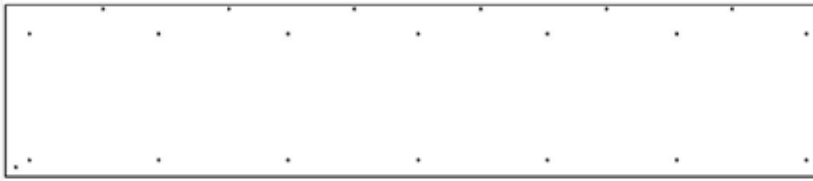

F

Right Side – CH15	01060341	1 ea.
Right Side – CH18		1 ea.

Toeboard – CH15	01060172	1 ea.
Toeboard – CH18		1 ea.

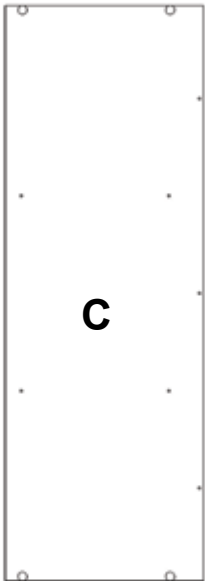


C




E

Bottom – CH15	01060111	1 ea.
Bottom – CH18		1 ea.

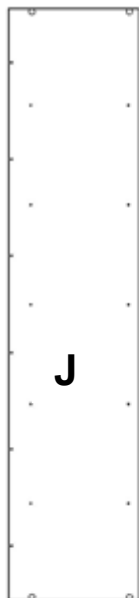

J

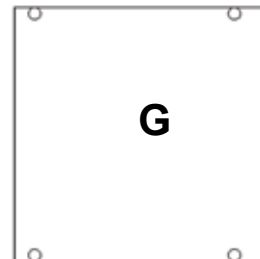

G

Top – CH15	01060101	1 ea.
Top – CH18		1 ea.

Divider – CH15	01060344	2 ea.
Divider – CH18		2 ea.

Shelf – CH15	01060127	12 ea.
Shelf – CH18		15 ea.

HARDWARE



H1	Rafix Cam	909917	CH15-76 ea. CH18-72 ea.
----	-----------	--------	----------------------------



H2	Flush Rafix Cam	909918	CH15-41 ea. CH18-52 ea.
----	-----------------	--------	----------------------------



H3	Rafix Bolt	909925	CH15-54 ea. CH18-60 ea.
----	------------	--------	----------------------------




H4	Rafix Through Bolts	909926	CH15-26 ea. CH18-32 ea.
----	---------------------	--------	----------------------------

Using the Rafix System:



Insert the Rafix Cams into the appropriate holes. The flat edge of the cam should be facing the edge of the panel.

Slide Rafix Cams of the panel to be attached onto the corresponding posts.

When screwing post into hole, **Do Not** over tighten. Screw post down until bottom face of post flange just touches board surface.


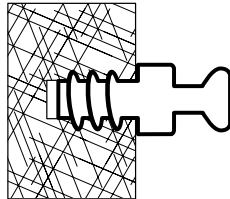


Using a #3 Phillips screwdriver, turn the rotating portion of the Rafix Cam a 1/2 turn clockwise to secure. **IMPORTANT!** Do not exceed 1/2 turn when tightening cams. Turn 1/2 turn counterclockwise to disassemble and remove panel.

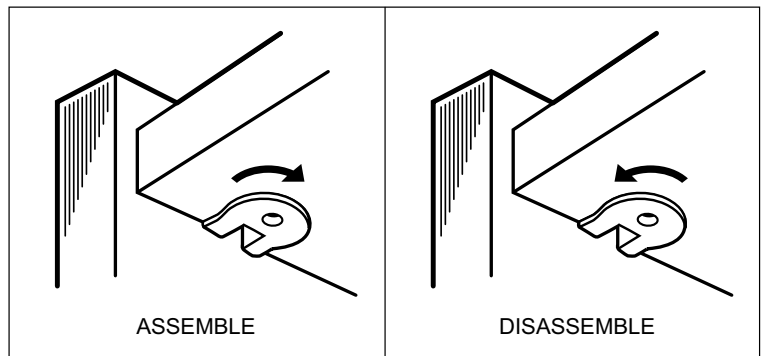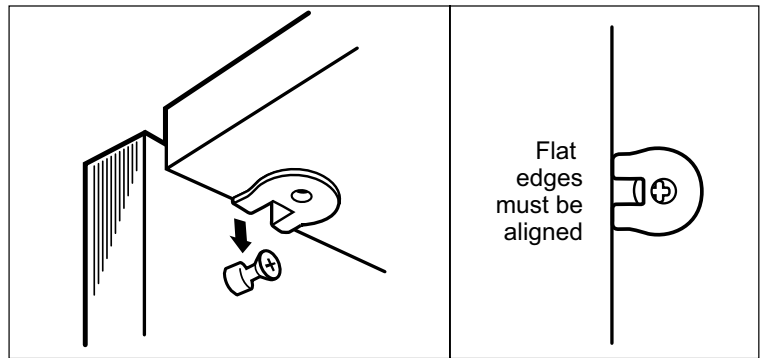


#1

Take right panel and place 21 Rafix Bolts (H3) into the designated holes.

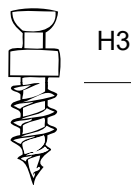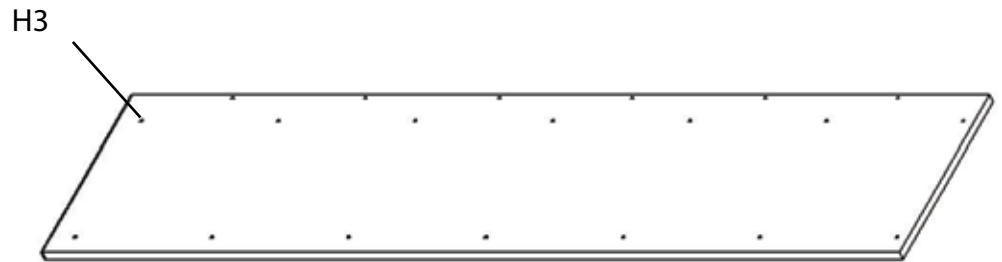

#2

Insert 13 flush rafix cams (H2) and 1 rafix bolt (H3) into back panel. Lower back panel onto right panel. Tighten flush rafix cams.

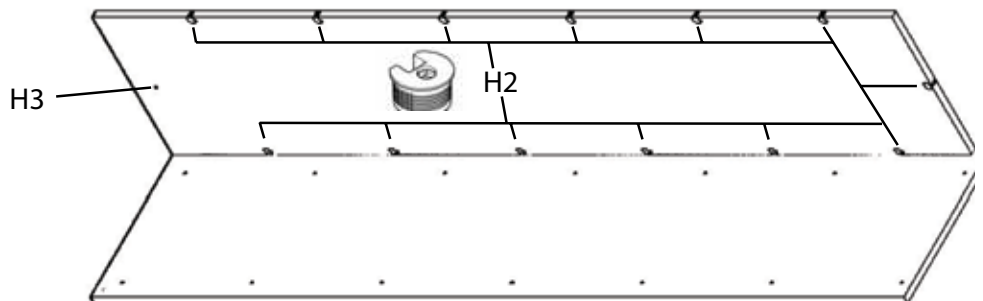

#3



Take bottom panel and insert 4 Rafix bolts (H3) on one side of panel and 7 rafix cams (H1) and 3 rafix bolts (H3) to the other side. Please see illustration below for bottom view of the bottom panel.



H3




H1

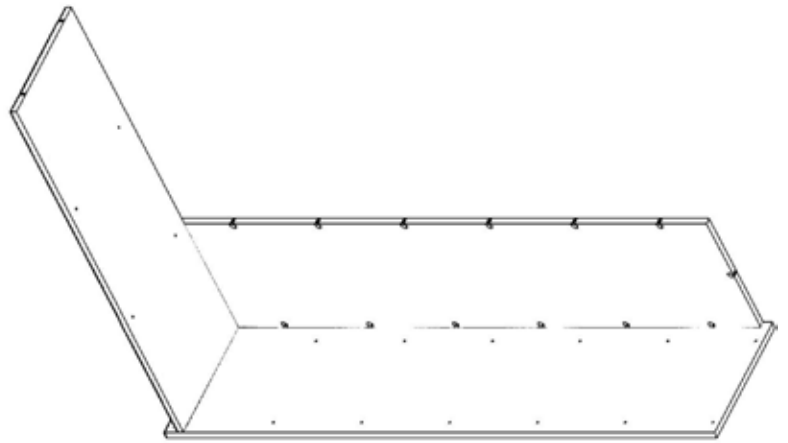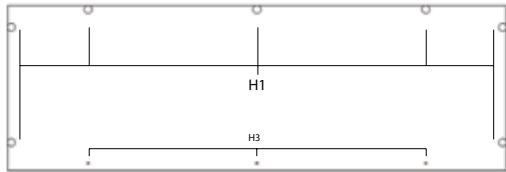


#4

Take your shelf panel and insert 4 flush rafix cams (H2). Place shelf on the 2 bolts on the right panel and tighten.

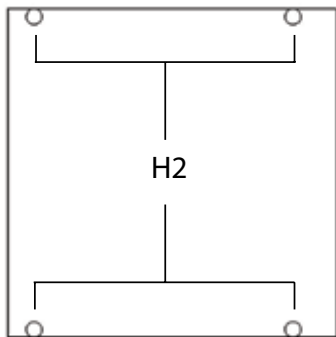


H2

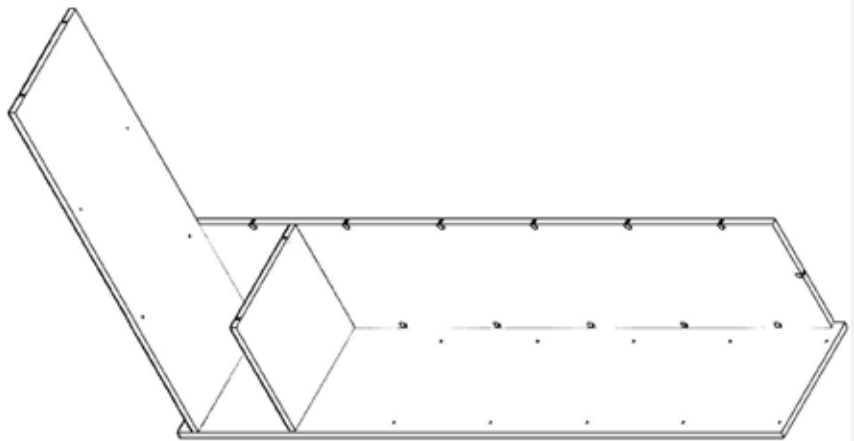


#5

repeat step 5 for remainder of shelf panels for this section.

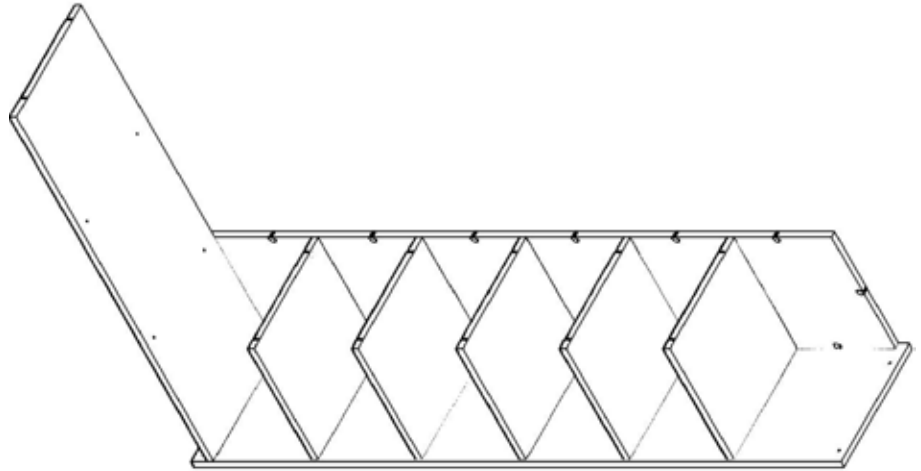

#6


Insert 4 flush rafx cams (H2) and 7 rafx bolts (H3) to top panel. Set into place and tighten flush rafx cams.

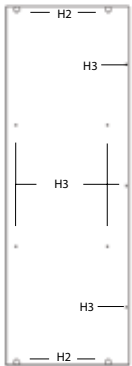

H2




H3

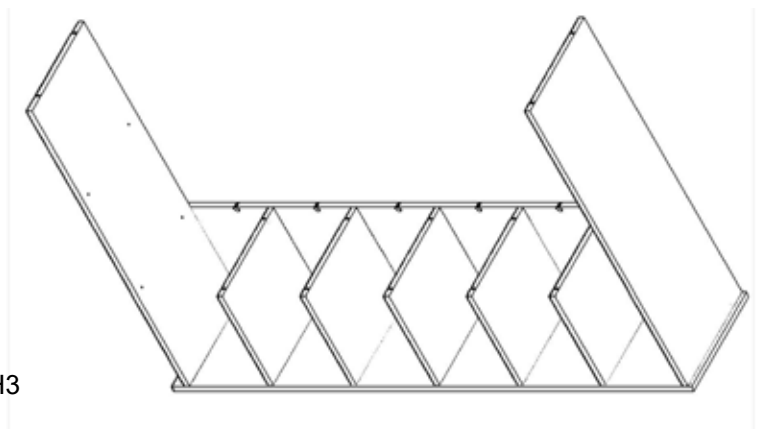


#7

Set divider into place and set the through bolts (H4) through divider. Secure top and bottom rafx cams and shelf rafx cams by tightening.

Repeat previous steps until you come to toeboard and left side end panel.


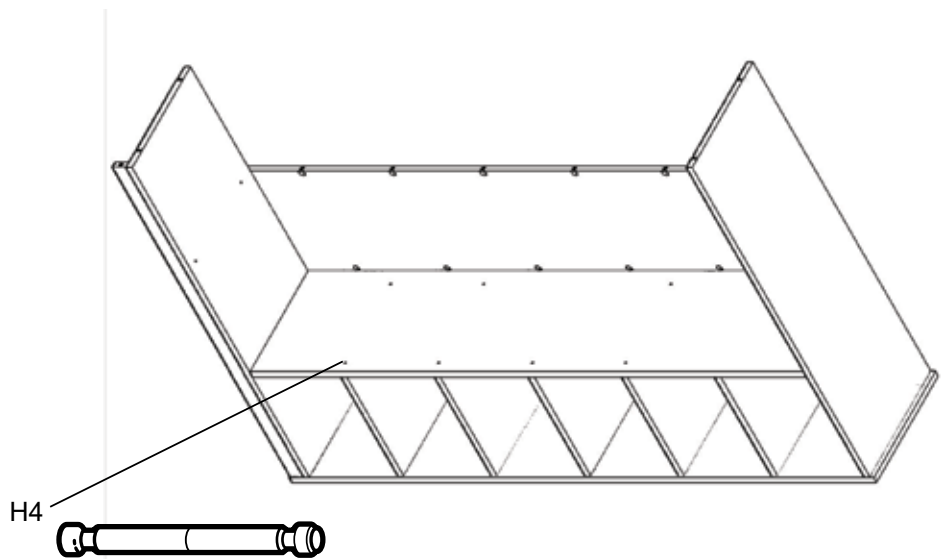


H4



#8

Place 5 flush rafx cams (H2) into toekick and install towards the bottom of unit.

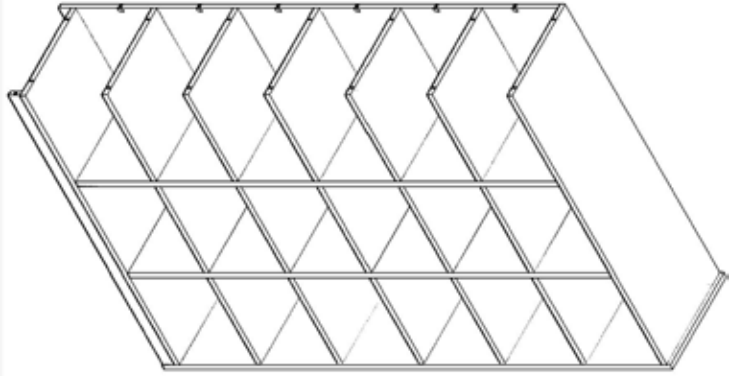



#9

Take left side end panel and place 21 rafx bolts (H3) into designated holes. Set left side end panel into place and tighten.

H3



H3

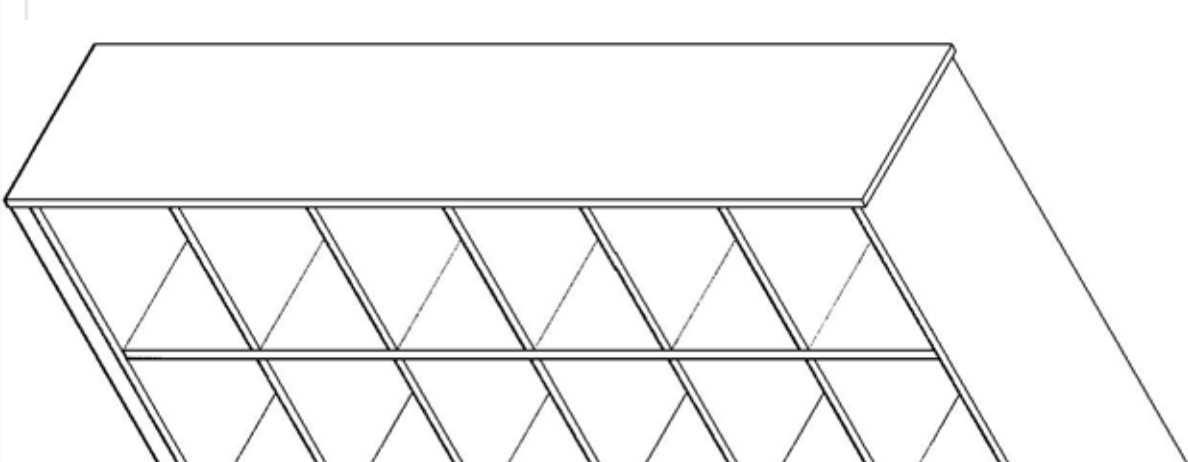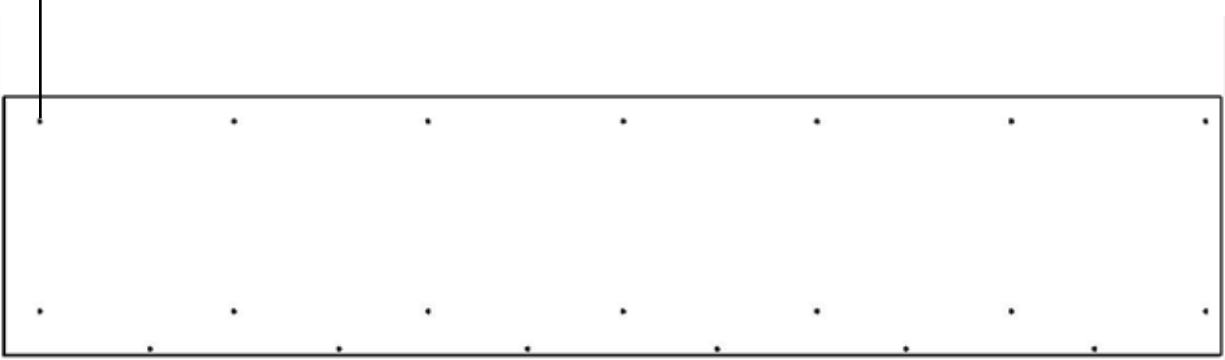

#10

**Your Glacier Cubby Hole Unit is
now assembled and ready for use.**

