




BY  **IRONWOOD**

**LIBRARY FURNITURE**

**LFPD**

**PAPERBACK  
DISPLAY**

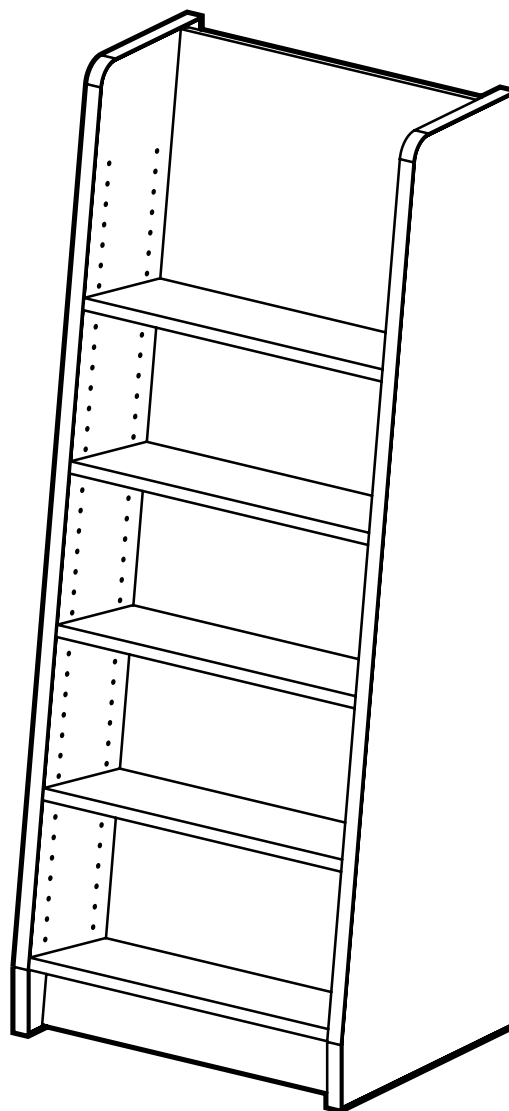

### **IMPORTANT!**

**Assembly may require the assistance of another person.**

**Before you begin assembly:**

**READ THE DIRECTIONS** all the way through one time. This will speed up the process and help you understand the sequence of steps.

**COUNT THE PARTS AND HARDWARE** before assembly. This ensures you have received all necessary parts before you begin.

**TOOLS:** You may need a Phillips head screwdriver, a medium slotted screwdriver or a plastic mallet. To protect your new furniture from damage during assembly, it is recommended to work on a carpeted surface.


In the event any parts are missing from this package, send your name, address, telephone number, and a description of the missing part(s) to: **PARTS, Box 1420, Missoula, MT 59806** or call: **1-800-769-5693** or **FAX 1-800-445-5281**.

**CAUTION:** On assemblies requiring glue, make sure the unit is assembled correctly before gluing. Once this unit is assembled with glue, the manufacturer will not be responsible for damaged parts. Keep a damp cloth or sponge handy to wipe off excess glue.


To care for this furniture, simply wipe with a cloth dampened with glass cleaner containing ammonia-D.

PARTS DIAGRAM


Left Panel	07010742	1 ea.
------------	----------	-------

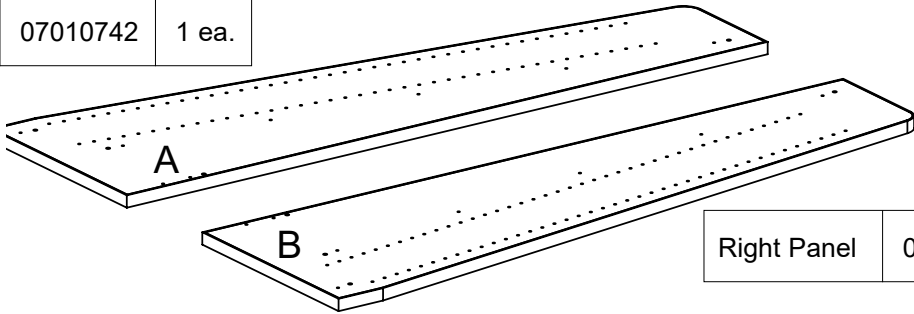


Right Panel	07010742	1 ea.
-------------	----------	-------

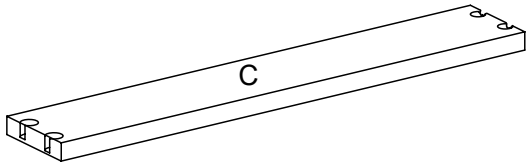


Toeboard	07010772	1 ea.
----------	----------	-------

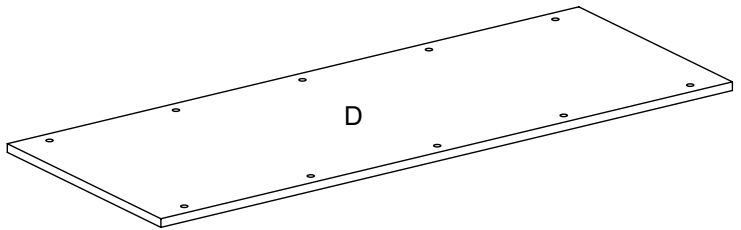

Sloped Back	07010755	1 ea.
-------------	----------	-------

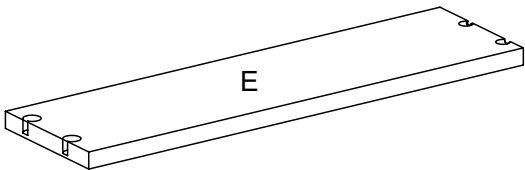

Back Spanner	07010760	1 ea.
-----------------	----------	-------

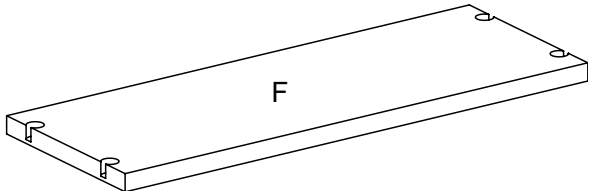

Fixed/Adj. Shelf	07010724	5 ea.
---------------------	----------	-------

PARTS DIAGRAM



H2	Rafix Flush Cam	909911	18 ea.
----	--------------------	--------	--------

H3	Rafix Bolt	909925	22 ea.
----	------------	--------	--------



H4	Rafix Cam	909909	20 - ea.
----	-----------	--------	----------




H5	Rafix Shelf Pin	909924	16 ea.
----	--------------------	--------	--------

## Using the Rafx System:



Insert the Rafx Cams into the appropriate holes. The flat edge of the cam should be facing the edge of the panel.

Slide Rafx Cams of the panel to be attached onto the corresponding posts.

When screwing post into hole, **Do Not** over tighten. Screw post down until bottom face of post flange just touches board surface.


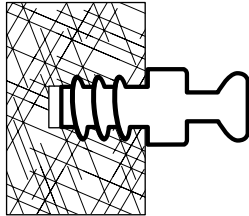


Using a #3 Phillips screwdriver, turn the rotating portion of the Rafx Cam a 1/2 turn clockwise to secure. **IMPORTANT!** Do not exceed 1/2 turn when tightening cams. Turn 1/2 turn counterclockwise to disassemble and remove panel.

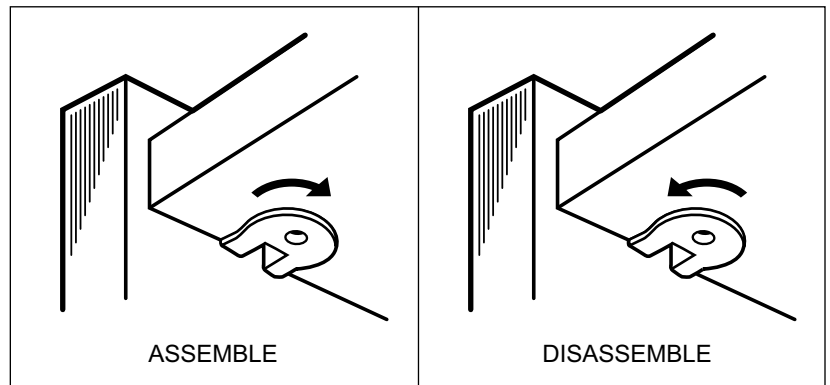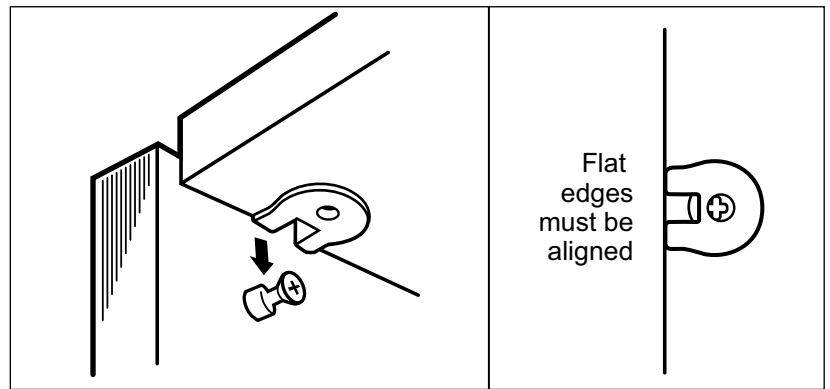


## #1

Screw in Rafx Bolts (H3) into corresponding holes.

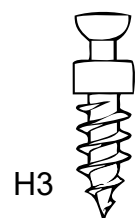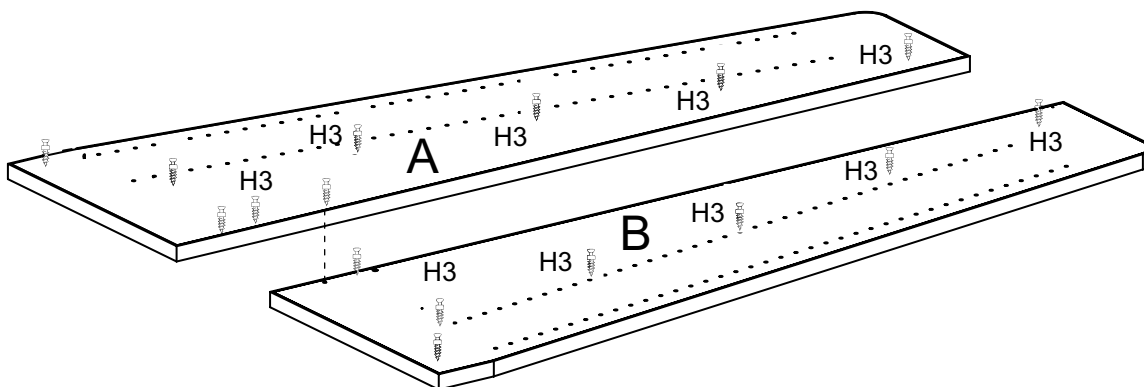


**#2**

Insert Rafix Flush Cams(H2).

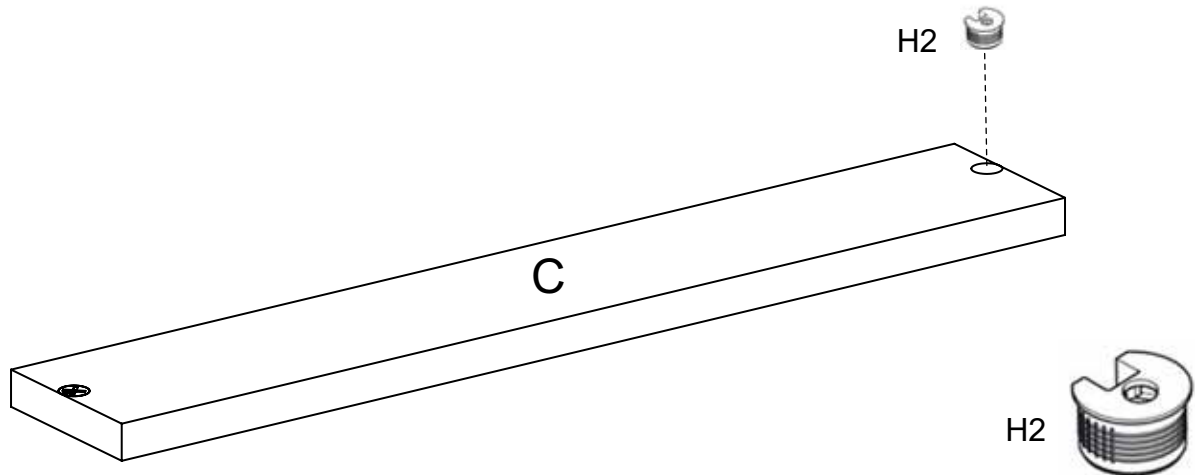


**#3**

Insert Rafix Flush Cams (H2).

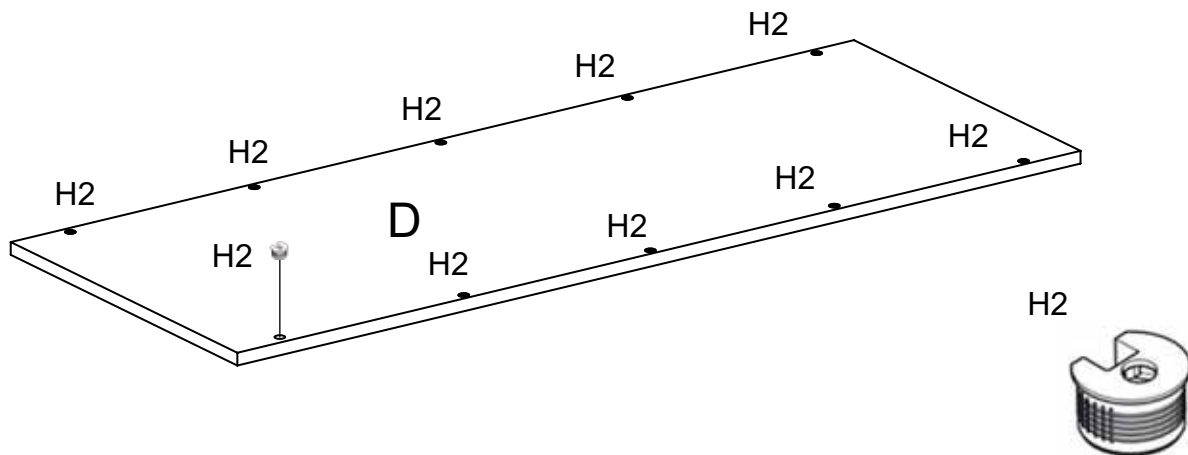


**#4**

Insert Rafix Flush Cams (H2).

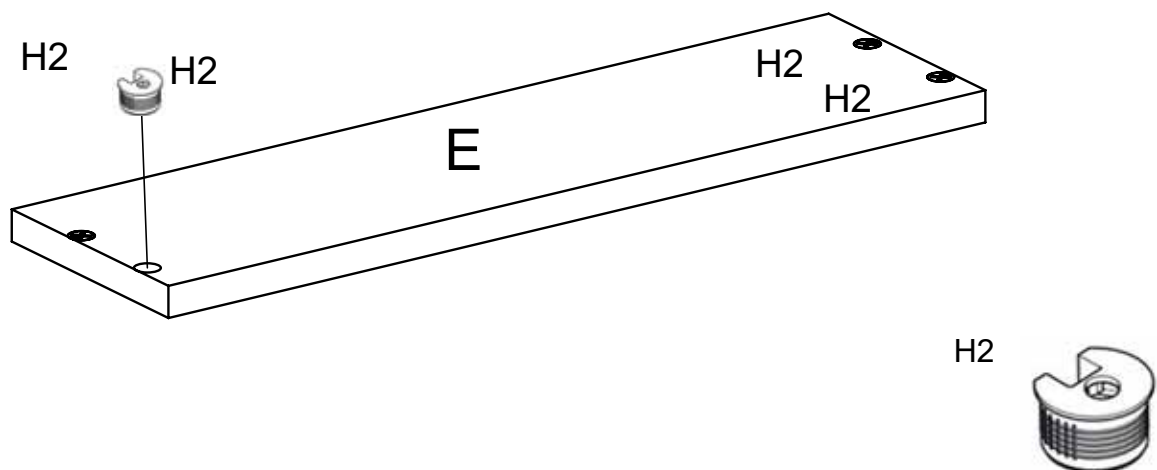


#5

Insert Rafix Cams(H4).

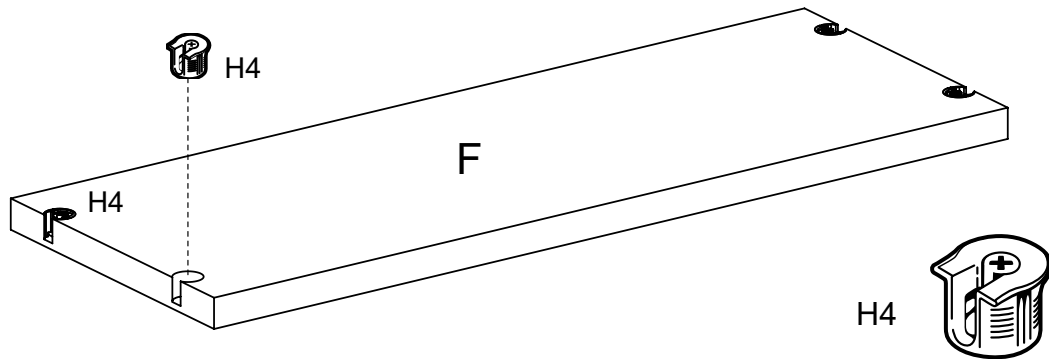


#6

Attach Toeboard (C) to Right Panel (B) and secure by turning Rafix Flush Cam (H2).

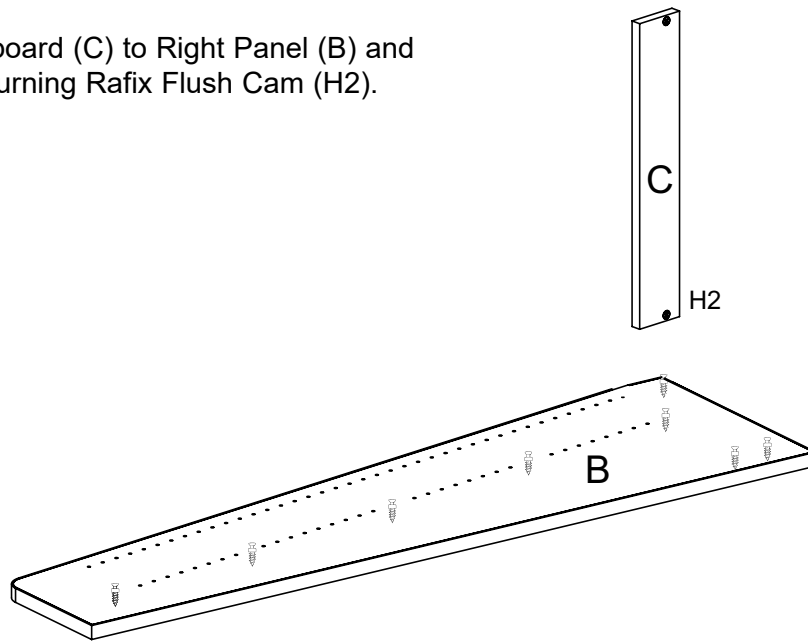


#7

Attach Sloped Back Panel (D) to Right Side Panel (B) Secure by turning Rafix Flush Cam (H2).

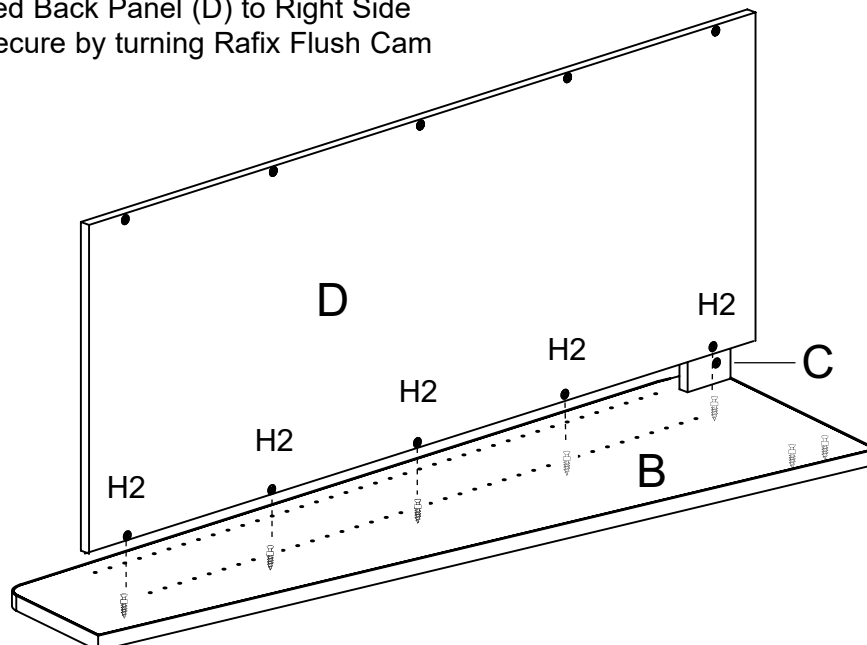


**#8**


Attach Back Spanner (E) to Right Side Panel (B).  
Secure by turning Rafix Flush Cam(H2).

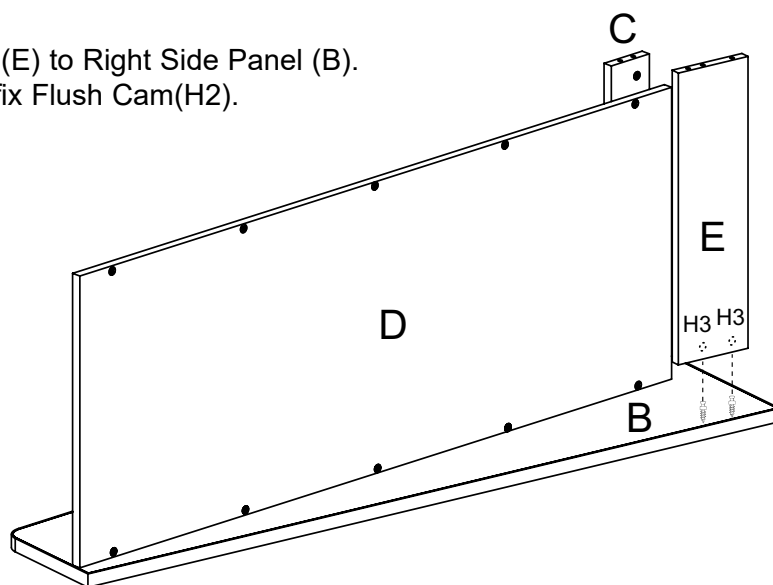**#9**

Attach Left Panel (A) to Sloped Back Panel (D),  
Toeboard (C) and Back Spanner (E). Secure by  
turning Rafix Flush Cam (H2).


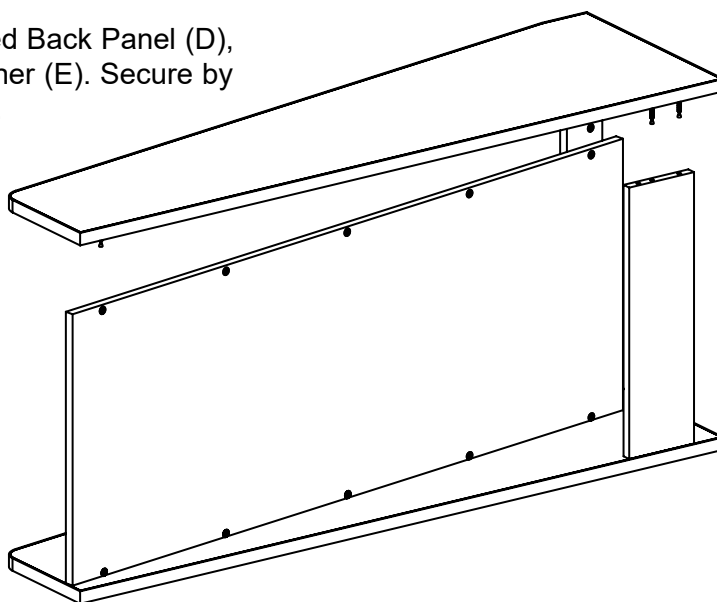
**#10**

Attach fixed shelf (F) to Left/  
Right Panel (A/B). Secure by  
turning screw in Rafix Cam  
(H4).

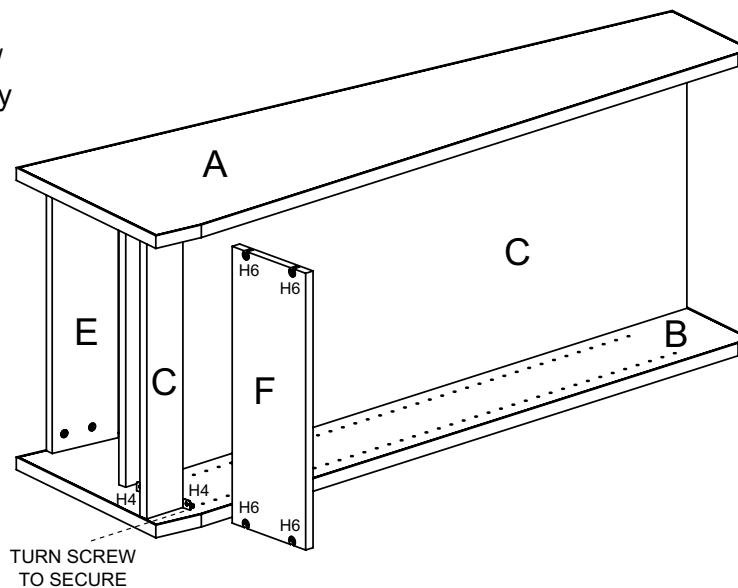

**#11**

Screw in Rafix bolt(H3) and attached fixed shelf.

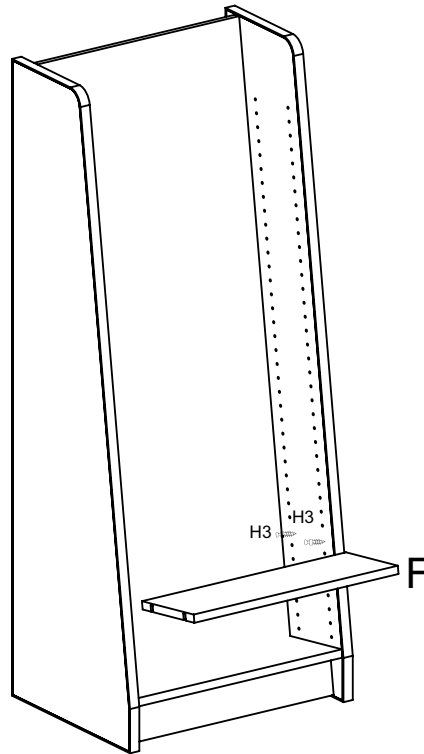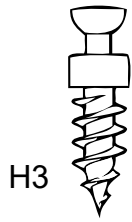

**#12**

Push in rafix bolt(H5) for remaining adjustable shelves

Assembly is Complete

