

LW36

LAB WORKSTATION

IMPORTANT!

Assembly may require the assistance of another person.

Before you begin assembly:

READ THE DIRECTIONS all the way through one time. This will speed up the process and help you understand the sequence of steps.

COUNT THE PARTS AND HARDWARE before assembly. This ensures you have received all necessary parts before you begin.


TOOLS: You may need a Phillips head screwdriver, a medium slotted screwdriver or a plastic mallet. To protect your new furniture from damage during assembly, it is recommended to work on a carpeted surface.

In the event any parts are missing from this package, send your name, address, telephone number, and a description of the missing part(s) to: PARTS, Box 1420, Missoula, MT 59806 or call: 1-800-769-5693 or FAX 1-800-445-5281.


CAUTION: On assemblies requiring glue, make sure the unit is assembled correctly before gluing. Once this unit is assembled with glue, the manufacturer will not be responsible for damaged parts. Keep a damp cloth or sponge handy to wipe off excess glue.

To care for this furniture, simply wipe with a cloth dampened with glass cleaner containing ammonia-D.


PARTS DIAGRAM

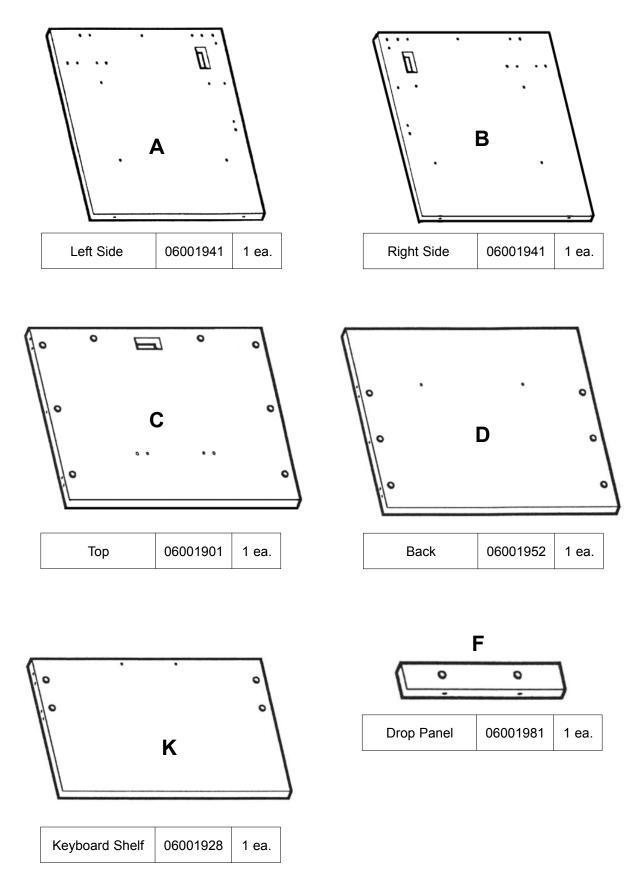

HARDWARE

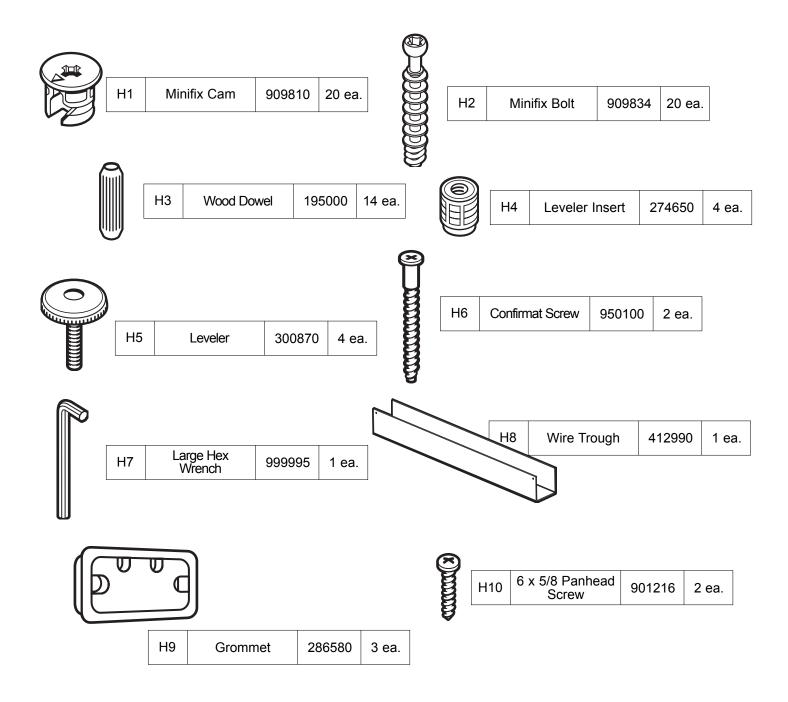


for Connecting to Other Units

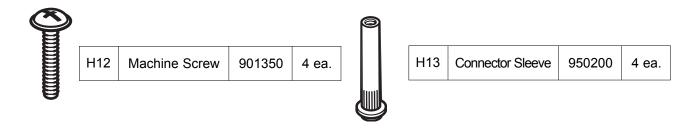

Using the Minifix System:


Insert the Minifix Cams into the appropriate holes with the arrow facing outwards as shown.


When screwing post into hole, **Do Not** over tighten. Screw post down until bottom face of post flange just touches board surface.





Using the #2 Phillips screwdriver, rotate the Cam Devices a half turn clockwise until snug.

To disassemble, turn the Cam Devices counter-clockwise and remove panels.

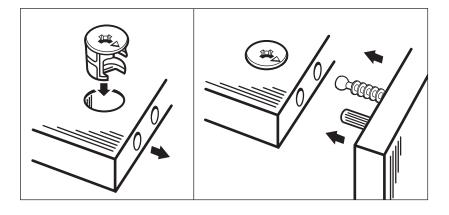

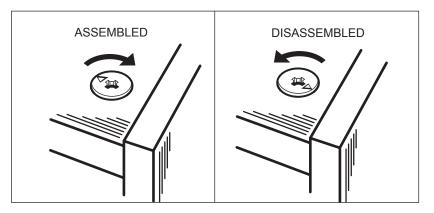

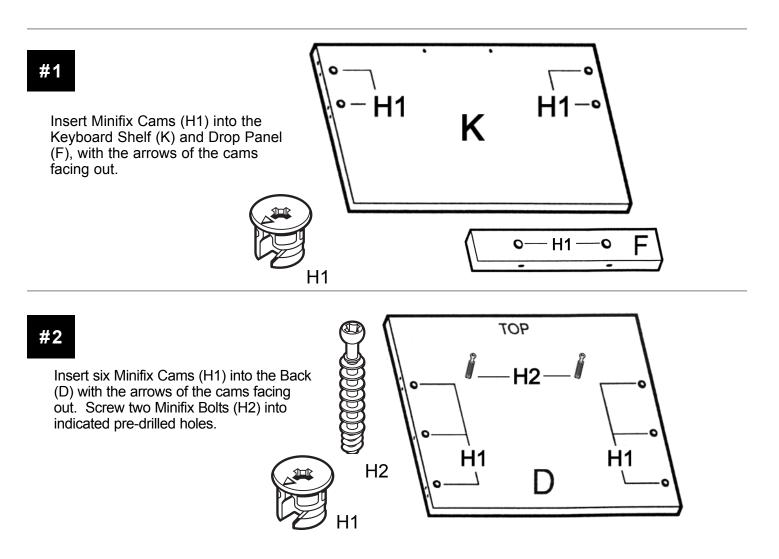


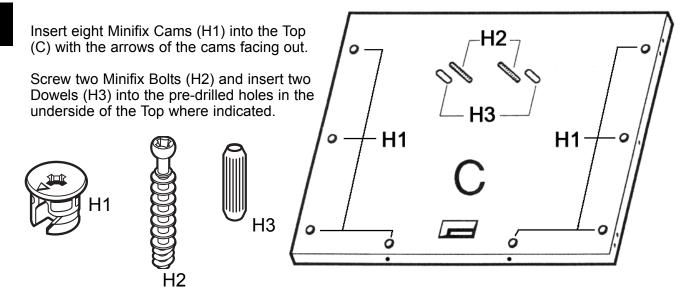

#4

Insert the Leveler Inserts (H4) into the holes in the bottom edges of Left Side (A) and Right Side (B). Using a plastic mallet, tap until flush with the surface. Screw the Levelers (H5) into the Leveler Inserts.


Adjust Levelers when the assembled unit is in place.

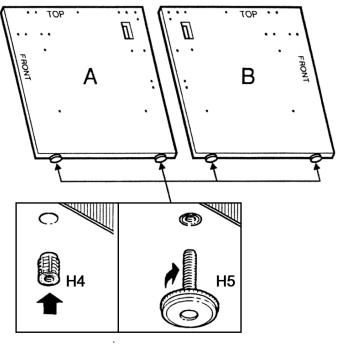

#5


Using a screwdriver, screw eight Minifix Bolts (H2) into the Side Panels (A & B) where indicated.

Insert six Dowels (H3) into each Side where indicated.

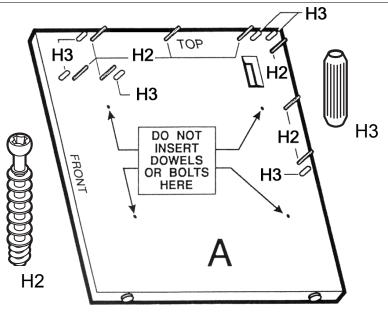


#6

Position the Drop Panel (F) onto the posts and dowels of the Top (C) as shown. Turn the cams (H1) clockwise to secure in place.

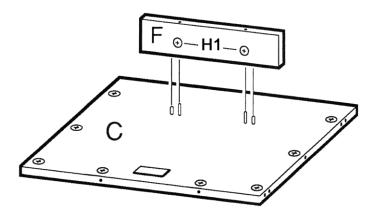




Position the Top (C) onto the Back (D) as shown and turn cams (H1) clockwise

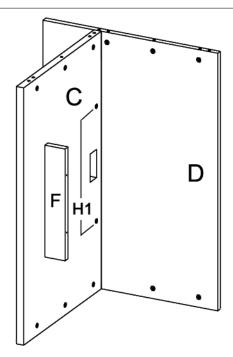


#8


Position the Top (C) and Back (D) assembly onto the Left Side (A) and turn six cams (H1) clockwise to secure.

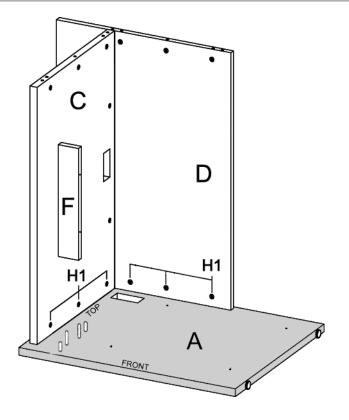

Position the Keyboard Shelf (K) onto the Left Side (A) as shown and turn cams (H1) clockwise to secure. #10


Secure the Keyboard Shelf (E) to the Drop Panel (F) using two Confirmat Screws (H6) in the pre-drilled holes as shown.

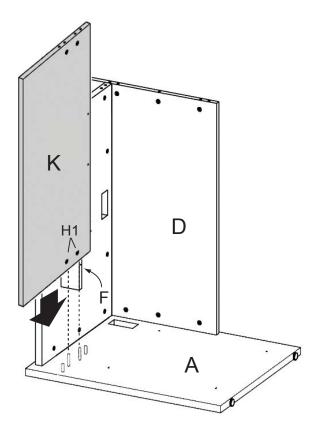


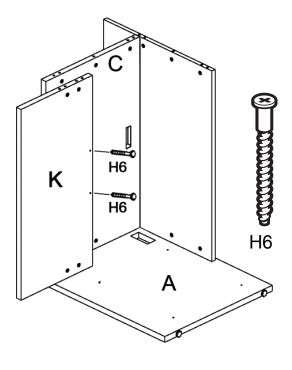

#11

Position the bolts and dowels of the Right Side (B) onto the unit and use the large Hex Wrench (H7) to turn the cams (H1) clockwise to lock in place.

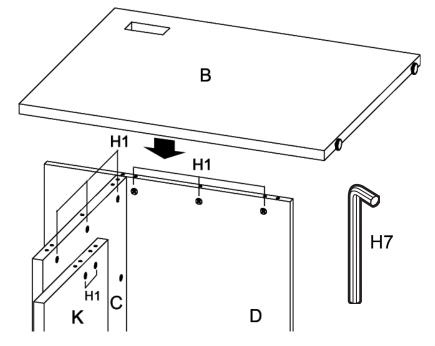


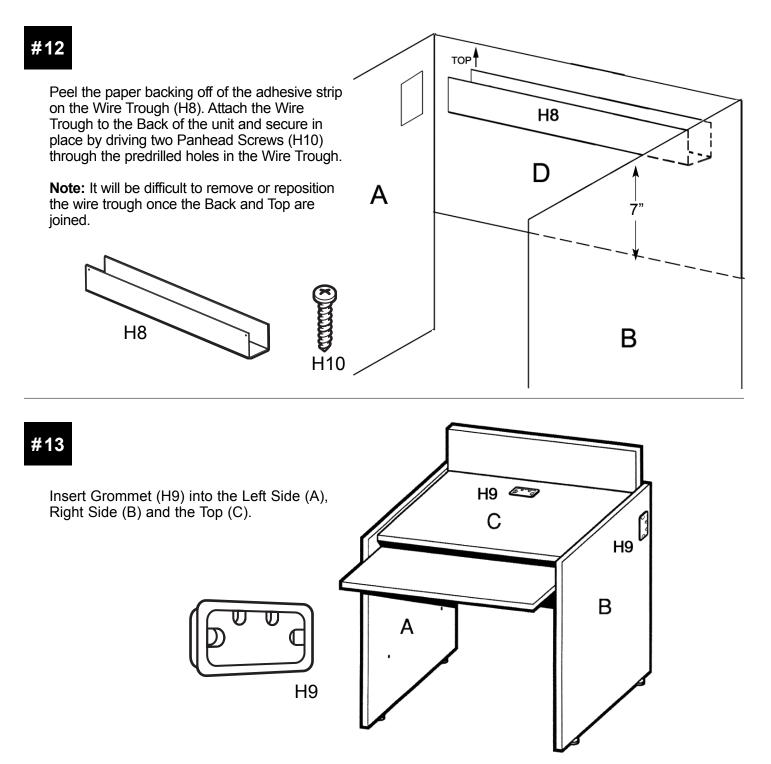

Your Lab Workstation is now completely assembled and ready for use.

CONNECTING OTHER WORKSTATIONS:

Remove Grommets from the panels to be connected.

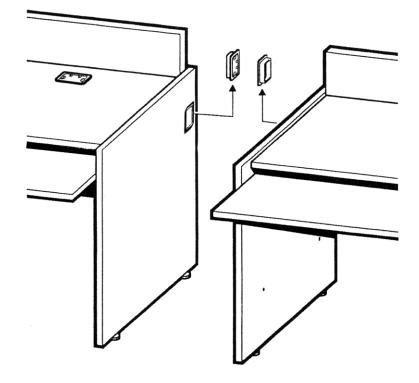

Using a 13/64" bit, drill through the four pilot holes on the inside of each side panel.

Align the side panels of the units to be connected. Tap four Connector Sleeves (H13) through the holes in one side panel and into the holes of the unit to be connected. From the other side, secure the units together using four Connector Screws (H12).

